

AK2000S相机控制列表 (WIFI)

品牌	型号	拍照	录像	对焦功能	变焦功能	ISO	曝光补偿	WB调节	切换模式 (拍照/录像)	支持按键固件版本	测试相机固件版本	
SONY	a9	OK	OK	NO	NO	OK	NO	OK	NO	ak2000s_sony_v104.bin	Ver. 6.00	
	a7 III (ATM3)	OK	OK	NO	OK	OK	NO	OK	NO	ak2000s_sony_v104.bin		
	a7R III	OK	OK	NO	NO	OK	OK	OK	NO	ak2000s_sony_v104.bin	Ver. 3.01	
	a7 II (ATM2)	OK	OK	NO	NO	NO	OK	NO	NO	ak2000s_sony_v104.bin	Ver. 4.00	
	a7S II	OK	OK	NO	OK	NO	OK	NO	NO	ak2000s_sony_v104.bin	Ver. 2.00	
	a7R II	OK	OK	NO	NO	NO	OK	NO	NO	ak2000s_sony_v104.bin	Ver. 4.00	
	a7C	OK	OK	NO	NO	NO	OK	NO	NO	ak2000s_sony_v104.bin		
	a7R	OK	OK	NO	OK	NO	OK	NO	NO	ak2000s_sony_v104.bin	Ver. 2.00	
	a7	OK	NO	NO	NO	NO	OK	NO	NO	ak2000s_sony_v104.bin		
	RX100 IV	OK	OK	NO	OK	OK	OK	OK	NO	ak2000s_sony_v104.bin	Ver. 1.0.0	
	RX100 V	OK	OK	NO	OK	OK	OK	NO	NO	ak2000s_sony_v104.bin	Ver. 1.0.2	
	RX100 VI	OK	OK	NO	OK	OK	OK	OK	NO	ak2000s_sony_v104.bin		
	a5100	OK	OK	NO	OK	NO	OK	NO	OK	ak2000s_sony_v104.bin		
	a6000	OK	NO	NO	OK	NO	OK	NO	NO	ak2000s_sony_v104.bin		
	a6500	OK	OK	NO	OK	NO	OK	NO	NO	ak2000s_sony_v104.bin	Ver. 2.00	
	a6600	OK	OK	NO	OK	OK	OK	OK	No	ak2000s_sony_v104.bin	Ver. 1.00	
a6800	OK	OK	NO	OK	OK	OK	OK	NO	ak2000s_sony_v104.bin	Ver. 2.00		
a6100	OK	OK	NO	OK	OK	OK	OK	NO	ak2000s_sony_v104.bin	Ver. 1.00		
Canon	M50	OK	OK	NO	NO	NO	NO	NO	OK	ak2000s_canon_v104.bin	Ver. 1.0.0	
	EOS R	OK	OK	NO	NO	OK	OK	NO	OK	ak2000s_canon_v104.bin	Ver. 1.0.0	
	M6 mark II	OK	OK	NO	NO	OK	OK	NO	OK	ak2000s_canon_v105.bin	Ver. 1.0.0	
	EOS RP	OK	OK	NO	NO	OK	NO	NO	OK	ak2000s_canon_v105.bin	Ver. 1.3.0	
	EOS 200D II	OK	OK	NO	NO	OK	OK	NO	OK	ak2000s_canon_v106.bin	Ver. 1.0.0	
	EOS 90D	OK	OK	NO	NO	OK	OK	NO	OK	ak2000s_canon_v106.bin	Ver. 1.0.0	
	GTX mark III	OK	OK	NO	NO	OK	NO	NO	OK	ak2000s_canon_v105.bin	Ver. 1.0.1	
	EOS 80D	OK	OK	OK	NO	OK	OK	NO	NO	ak2000s_canon_v106.bin	Ver. 1.1.1	
EOS ED Mark II	OK	OK	OK	NO	OK	OK	NO	NO	ak2000s_canon_v106.bin	Ver. 1.0.1		
Panasonic	GH4	OK	OK	OK	NO	OK	OK	OK	OK	ak2000s_panasonic_v104.bin	Ver. 2.7	
	DC-GF9MK	OK	OK	OK	OK	OK	OK	OK	OK	ak2000s_panasonic_v104.bin		
	DC-GF9MK	OK	OK	OK	NO	OK	OK	OK	OK	ak2000s_panasonic_v104.bin	Ver. 1.1.1	
	DC-GF10MK	OK	OK	OK	NO	OK	OK	OK	OK	ak2000s_panasonic_v104.bin		
	GH5S		OK	OK	OK	NO	OK	OK	OK	OK	ak2000s_panasonic_v104.bin	Ver. 1.0.2
			OK	OK	OK	NO	OK	OK	OK	OK	ak2000s_panasonic_v104.bin	Ver. 1.0.0
	DC-GH9MK-K	OK	OK	OK	NO	OK	OK	OK	OK	ak2000s_panasonic_v104.bin		
	DMC-GH5	M5	OK	OK	OK	No	OK	No	OK	OK	ak2000s_panasonic_v104.bin	Ver. 1.2
S5, M5, P5		OK	OK	OK	No	OK	OK	OK	OK	ak2000s_panasonic_v104.bin	Ver. 1.2	
M5, S5, M5, P5		OK	OK	OK	No	OK	OK	OK	OK	ak2000s_panasonic_v104.bin	Ver. 2.3	

选择卡槽
M1行设置—Camera
Control API—设置

AK2000S相机控制列表 (线控)

品牌	系列型号	配线型号	相机控制功能	相机/镜头设置注意事项	相机版本	支持机型HUB固件版本	
Sony	Rx100 IV	Type-c to Multi9针	1. 拍照 2. 开始/停止录像 3. 半按快门聚焦 4. 变焦 5. 切换视频/静音 (P A S M auto)支持	1. 可设置相机/镜头头盖的开关 2. 若相机有镜头盖, 仅支持相机头盖	1.30	AK2000S_HUB_V102	
	Rx100 VI				1.00		
	a7SII				2.00		
	a7RII				4.00		
	a7II				4.00		
	a9				6.00		
	a7R				2.00		
	a7 III (ATM3)				3.01		
	a7R IV				1.00		
	a6400				1.00		
	a6300				2.00		
	6300						
	a6500				2.00		
AT52	1.01	AK2000S_HUB_V106					
ZV-1	1.0	AK2000S_HUB_V102					
ATC	US&2.0 to TypeC (C01)	1. 拍照 2. 开始/停止录像 3. 半按快门聚焦 4. 切换视频/静音 (P A S M auto)支持	1. 镜头开/关闭的“电源按钮功能”：MDU → (开/关) → (开/关) → (无相机时功能) → (相机时功能) → (开) 2. 将相机的“电源按钮连接方式”设置为[USB: MENU] (开/关) → (相机时功能) → (无相机时连接方式) → [USB] → (开/关) 3. 将相机的“电源按钮连接方式”设置为[USB: MENU] (开/关) → (相机时功能) → (无相机时连接方式) → [USB] → (开/关) 4. 将相机的“电源按钮连接方式”设置为[USB: MENU] (开/关) → (相机时功能) → (无相机时连接方式) → [USB] → (开/关)	1.00	AK2000S_HUB_V106		
				USB 2.0 (Micro A01)	1.0.0	AK2000S_HUB_V102	
					EOS RP		1.3.0
							M6 mark II
					GTX mark III		1.0.1
					EOS 200D II		1.0.0
							EOS 90D
EOS R	1.0.0						
EOS R5	1.1.1						
EOS R6	1.1.1						
Panasonic	GH5S	USB 2.0 TypeC (C01)	1. 拍照 2. 开始/停止录像 3. 电子取景	1. L52模式选择(PC: tether) 2. WiFi连接时不能同时使用 3. 电子取景时镜头盖要在AF模式	1.2	AK2000S_HUB_V102	
	GH4	松下DC2.5mm快门线	1. 拍照 2. 开始/停止录像	1. 需手动切换至相机静音模式	2.7		
	G9	Type-c to DC2.5mm快门线	1. 拍照 2. 开始/停止录像 3. 半按快门AF	1. 需手动切换至相机静音模式	2.00		
	S5	Type-c to DC2.5mm快门线	1. 拍照 2. 开始/停止录像 3. 半按快门AF	1. 需手动切换至相机静音模式	2.00		
Nikon	Z7	USB 2.0 TypeC (C01)	1. 拍照 2. 开始/停止录像 3. 电子取景	1. 开启相机后, 需要等待几秒钟相机快门才能成功连 2. 使用有线控制功能时, 相机快门不能同时使用 (S-V) 3. 执行静音模式时, 相机快门不能同时使用 4. 电子取景, 镜头盖要在AF模式, 且已收缩	1.00	AK2000S_HUB_V102	
	Z6			2.00			
Fujifilm	X-T20	Type-C to TRS2.5(T02)	1. 拍照 2. 开始/停止录像 3. 聚焦	1. 需将“麦克风/静音按钮设置”选择为“静音”, 具体操作为: 进入设置菜单, 相机设置[3] 动态影像设置[麦克风/静音]设置	2.01	AK2000S_HUB_V102	
	X-T30			1.00			
	X-T200			1.00			
	XA-5			2.00			
	XA-1			2.01			
	XT-4			1.00			
	XT-3			3.01			
	XT-100			2.00			
X-A7	1.00						
XS-10	Type-C to TRS2.5 (T03, A403)	1. 拍照 2. 开始/停止录像 3. 半按快门聚焦	1. 需将“麦克风/静音按钮设置”选择为“静音”, 具体操作为: 进入设置菜单, 相机设置[3] 动态影像设置[麦克风/静音]设置	1.02			
				1.02			